

Setup Instructions - Large 2.0 Rack kit



Safety: The Pizza-Porta is inserted into a Big Green Egg® or other kamado grill. Pizza cooking is done at high temperature (>500F). For this reason, extreme caution must be observed when interacting with the Pizza-Porta™. It will be **HOT**.

Part Edges may be sharp – use caution

1) The double rack kit includes

- Three stainless steel brackets
- 2 stainless nuts
- 2 stainless bolts – *Image 1*
- Brackets are arranged left, rear, and right in this photo – assemble front brackets with tabs bent toward the door



Image 1

2) Assembly

- Flip the Pizza-Porta upside down as shown in Image 2
- Loosen the door box attachment nuts on the inside of the unit
- Place left or right bracket (tabs toward the door as shown so bolts align through the holes – the bracket will extend below the bottom of the Pizza-Porta
- Replace nuts and tighten

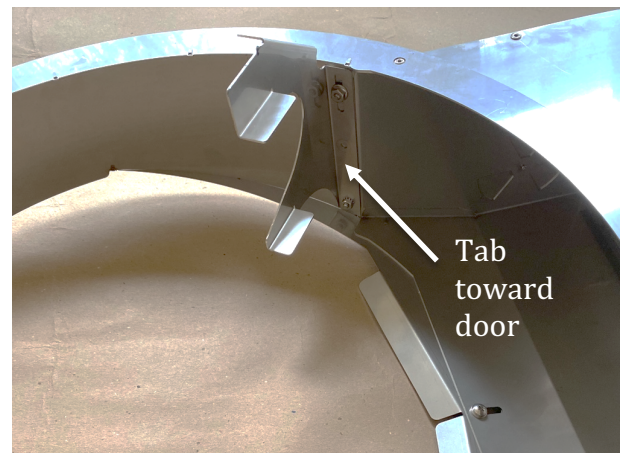


Image 2

3) Repeat on the other side

4) Rear Bracket

- The rear bracket uses the middle bracket hole and a horizontal slot to attach as shown in Image 3
- Place one bolt from the outside-in into dedicated hole in the rear ring
- Position bracket slot over this bolt, place nut and hand tighten
- Place the other bolt through the horizontal slot of the rear ring where it aligns with the hole in the bracket
- Align bracket vertically, tighten nuts

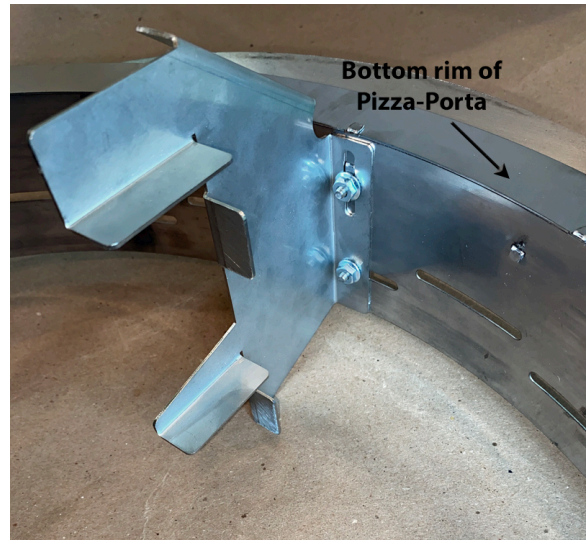


Image 3

BGE setup for the double rack kit: Use plate setter with legs up; one leg toward the front. Do not place the plate-setter down in the slots of the fire ring as this constricts airflow. No air-gap spacer is needed as the rack suspends the stones. Do not use the cooking grate.

Vision Grill: Make sure the lava-stone deflector is in place below the Pizza-Porta. The Pizza-Porta double rack will hold 14" or 15" stones if desired. **REMOVE** both the pizza stones before lifting the Pizza-Porta out with 14" stones – **the stones can slide out.**

Stone installation with the double rack

Set Pizza-Porta into the Big Green Egg® or Vision Grill (over the plate setter/Deflector). Place bottom stone into the Pizza-Porta from the top – not through the Pizza-Porta door. Angle bottom stone and lower it into the bottom supports. Then place the top stone into place. Pull the Pizza-Porta toward the front. Lower dome and ensure that the top acorn stopper nut is inside the dome. Do not lift or carry the Pizza-Porta with stones on the rack.



(If the bottom pizza stone is too hot, the 14" aluminum disk can be added directly under the bottom pizza stone.)